# De Ti

#### De Sisti Lighting S.p.a.

Via Cancelliera # 10a, 00040 Albano Laziale (Rome- Italy).


Tel. ..39/06/934991 Fax. ..39/06/9343489


U.R.L. Address: www.desisti.it E-mail address: desisti@desisti.it

# **MAGIS 650 W**

Quartz - Halogen Fresnel SPOTLIGHT

# **INSTRUCTION MANUAL**

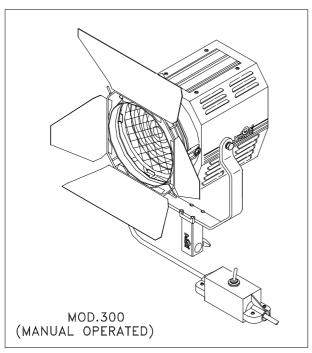

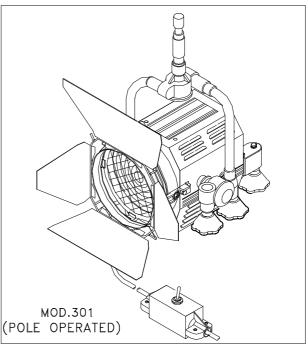

## **MANUFACTURER**

## **REPRESENTATIVE**

De Sisti Lighting S.p.a.

Via Cancelliera # 10a, 00040 Albano Laziale (Rome- Italy). Tel. +39/06/934991 Fax. +39/06/9343489

U.R.L.: www.desisti.it E-mail: desisti@desisti.it


#### 1. INTRODUCTION

Congratulations on your purchase of a MAGIS 650 W lighting fixture from De Sisti Lighting .Our commitment to Total Customer Satisfaction and our consolidated experience and leadership in design innovation and manufacturing of lighting products for the professional Entertainment Industry means you can depend upon the quality of this product.

The MAGIS 650 W is a compact, highly efficient Fresnel lens spotlight using tungsten-quartz-halogen filament lamps having GY 9,5 socket, L.C.L. of 46 mm. and max. 650 W power.

NOTE: PO Version is available on special request and it is supplied with the stirrup fitted on

÷

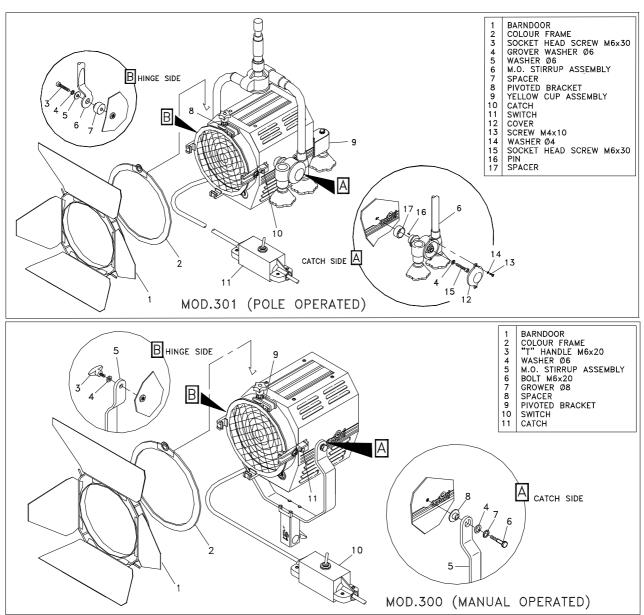

#### 3. SAFETY INSTRUCTIONS

- **Professional use:** This luminaire has been designed for professional use and must be operated by qualified personnel only. **Not for residential use.**
- **Grounding: WARNING**: THIS LUMINAIRE MUST BE GROUNDED
- **□ Electrical connections**: **IMPORTANT** The cores in this mains lead are colored in accordance with the following code:

	<u>Europe</u>	<u>America</u>
Ground	Green & yellow	Green or green & yellow
Neutral	Blue	White
Live	Brown	Black

In case the colors of the cores do not correspond to the colors of the connection points on your plug, please proceed as follows:

- the green or green and yellow core must be connected to the connection point marked with the letter E or with the symbol or colored in green or in green yellow;
- the blue (or white) core must be connected to the connection point marked with the letter N or colored in black;

 the brown (or black) core must be connected to the connection point marked with the letter L or colored in red.

#### **Working conditions**

Working Position	Lighting fixture: Max. Tilting ±90° from horizontal			Lamp: S90
<b>⇒</b> Ambient Temperature, t <sub>a</sub>	+45° C Max			
Minimum distances from	Тор	Back	Sides	Front
inflammable surfaces	0,3 m.	0,1 m.	0,1 m.	0,75 m.

The luminaire should never be OPERATED close to inflammable materials. The ones indicated in the above table are the minimum distances recommended. Other requirements for safe use are:

- A. Do not cover the apertures of the luminaire housing. They are essential for correct ventilation. Do not use on the floor. It reduces the ventilation.
- B. Use only original accessories and spares from De Sisti Lighting.
- C. Before hanging the luminaire ensure that the suspension point (or the stand) is properly rated to accept the luminaire weight.
- D. In case of pole operated use, fit only a P.O. stirrup from De Sisti Lighting.
- <u>E.</u> A suitable secondary safety suspension device (safety cable, chain or equivalent) must be fitted between the suspension point and *the eyelet at the front of the body*.

WARNING: DO NOT MOUNT THE LUMINAIRE ON A NORMALLY FLAMMABLE SURFACE.

#### 4. INSTALLATION INSTRUCTIONS

Before connecting the luminaire to the electrical mains ensure that:

- A Earth line is present on the power socket.
- B The mains voltage is within the rated range of the luminaire (see technical data on the rating label)
- C The lamp fitted:
  - is among the usable lamps (see point 6 or check with your De Sisti dealer)
  - has the same nominal voltage as the mains supply
  - has a nominal power not higher than maximum power of the luminaire.
- D The front safety shields against the lamp explosion are present and in good condition.

They consist of fresnel lens plus wire guard . The fresnel lens is made by borosilicate untoughened glass D=120~mm, thickness = 4 mm typ (3 min), compliant to DIN 15560 . The wire guard is a mesh 25 mm x 25 mm (or smaller), wire D=0.8~mm typ, made by nickel coated steel.

**WARNING**: SHIELDS, LENSES SAFETY OR DICHROIC GLASSES SHALL BE CHANGED IF THEY HAVE BECOME VISIBLY DAMAGED TO SUCH AN EXTENT THAT THEIR EFFECTIVENESS IS IMPAIRED, FOR EXAMPLE BY CRACKS OR DEEP SCRATCHES.

THE LUMINAIRE SHALL ONLY BE USED COMPLETE WITH ITS PROTECTIVE SHIELD.

#### 5. LAMP INSTALLATION AND REPLACEMENT

The following procedure should be adopted:

- A Ensure the luminaire is electrically isolated from the power supply.
- B WAIT LEAST 5 MINUTES FROM SWITCHING OFF to avoid risk of injury from possible lamp explosion. Then open lens door .

**WARNING:** AFTER THE ABOVE MENTIONED TIME THE LAMP MAY STILL BE VERY HOT, USE PROPER THERMAL PROTECTION (EG. GLOVES).

- C Check that the new lamp is of the correct type ( see item 4 .C).
- D Replace the lamp taking good note of the following:
  - do not touch the bulb with bare-hands; oil and grease can contaminate the bulb surface and then reduce the performance and the lamp life.
  - The plastic cover which protects the lamp should not be removed until after fitting.
  - Should the bulb become dirty due to hand contact or for any other reason, it can be cleaned with a cloth moistened with alcohol
- E Ensure that the lens door is securely closed.


WARNING: THE LAMP MUST BE REPLACED IF IT HAS BECOME DAMAGED OR DEFORMED.


#### 6. CHARACTERISTICS AND PERFORMANCE DATA

DESCRIPTION		VALUE		
<b>•</b>	Amperage	Europe - 230 V	America - 120 V	
		2,9 A (650W)	5.5 A (650 W)	
)	Power supply	Europe	America	
	1 Ower supply	230 V / 0-60 Hz	120 V / 0-60 Hz	
∍	Switch on line	M.O. & P.O.		
		Toggle: 16A\125V - 8A\250V		
<b>•</b>	Lamp Holder	GY 9,5	<u> </u>	
		Europe dis 150°c	America	
<b>•</b>	Power Cable	3 x 1,5 mm <sup>2</sup> – 150°C ( 0,5 m silicon 180 °C	3 x 16 Awg ( 0,5 m high T 200°C	
		+ 3m H07RN-F 90°C)	+ 3m SO 90°C + Plug	
Protection Class		Class 1- ground connection required		
Protection Type		IP 22		
<ul> <li>Max. Housing Surface Temperature</li> </ul>		220° C		
•	Weight of Fixture	M.O.	P.O.	
		4,7 kg.	kg.	
•	Weight of	4 leaf	8 leaf	
Barndoor		kg.	kg.	
0	Size of Barndoor	Seat Diameter	Ring Diameter	
ring		mm	mm ( 7" <sub>1/2</sub> )	
<ul><li>Weight of color frame</li></ul>		kg.		
•	Size of scrims	Seat Diameter	Accessory Diameter	
& color frame		Mm	mm ( 7" <sub>1/4</sub> )	
<b>•</b>	Lens diameter	120 mm.		

•	Amperage	Europe - 230 V	America - 120 V		
		2,9 A (650W)	5.5 A (650 W)		
⇒ Power supply		Europe	America		
		230 V / 0-60 Hz	120 V / 0-60 Hz		
<b>=</b>	Switch on line	M.O. & P.O.			
		Toggle: 16A\125V - 8A\250V			
<b>•</b>	Lamp Holder	GY 9,5			
		Europe dis 150°c	America		
<b>&gt;</b>	Power Cable	3 x 1,5 mm <sup>2</sup> – 150°C	3 x 16 Awg		
		( 0,5 m silicon 180 °C			
<b>•</b>	Protection Class	+ 3m H07RN-F 90°C) + 3m SO 90°C + Plu			
_		Glado i glodila dell'iledici i required			
•	71	IP 22			
<b>&gt;</b>	Max. Housing	220° C			
Surface Temperature		220 0			
<b>-</b>	Weight of Fixture	M.O.	P.O.		
		4,7 kg.	kg.		
	Weight of	4 leaf	8 leaf		
Barndoor		kg.	kg.		
•	Size of Barndoor	Seat Diameter	Ring Diameter		
ring	I	mm	mm ( 7" <sub>1/2</sub> )		
•	Weight of color	ka			
frame		kg.			
•		Seat Diameter	Accessory Diameter		
& color frame		Mm	mm ( 7" <sub>1/4</sub> )		
Lens diameter		120 mm.	·		

23	0 v	12	0 v
ANSI	LIF	ANSI	LIF
FSL	CP 81	FKW	CP 81
FRH	CP 82	FRG	CP 82
FRL	CP 89	FRK	CP 89
	ANSI FSL FRH	FSL CP 81 FRH CP 82	ANSI         LIF         ANSI           FSL         CP 81         FKW           FRH         CP 82         FRG

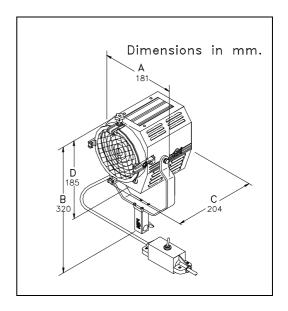

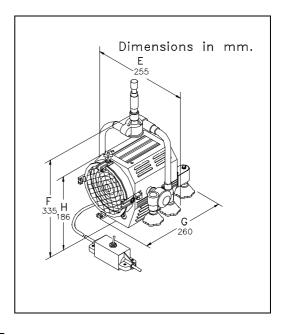

#### 7. PERIODIC INSPECTION

- A. The condition of the internal wiring insulation and of the input cable shall be inspected and tested every 500 working hours and at least once a year. This frequency may need to be increased if rough or unknown (eg. rental) treatment is incurred. Replace only with original De Sisti Lighting spare parts. Non-original cables may not withstand the thermal and mechanical conditions of use
- B. The lamp condition must be checked every 100 working hours. For lamp replacement follow the procedure of point 5 and the instruction of the lamp manufacturer.
- C. Check the condition of the safety shield (see chapter 4-D: Installation Instructions) before every use.

### 8. SAFETY STANDARDS

Eu	Irope: The product conforms the Applicable European Directives & Standards	America: the product conforms NEC & UL stds.		
0 0	ENO D'accide de 00/000/EEO (	UL Standard : 1573 Approved by UL: file E116219		
<b>•</b>	Europen Standards:: EN 60598-2-17, EN 60598-1, EN 55015, EN 61547	Approved by OL. IIIe LT10213		